



**Fuse Index (cont'd)**  
 B3: Auto g box select light, Elec mirror sw, Fuel/Temp gauges, Low fuel/Oil press /S belt warnings, Reverse lamps, Trip computer display, Rear w/wipe switch-10A, C3: Cigar lighters, Courtesy interior lamps, Map lamp, Trip computer input, Under bonnet lamps, Homs-25A.

**Fuse Index**  
 B5: Stops -7.5A  
 A4: Aerial -7.5A  
 A3: Radio -3A  
 C2: LH Dip -10A  
 C6: RH Dip -10A  
 A5: Rear fogs -10A  
 A6: LH outer/LH inner main beam -10A  
 B1: Blower motor -25A  
 B2: Blower switch -7.5A  
 C1: Air/Con clutch -7.5A  
 C4: Hazard & Direction indicators -10A  
 C5: Cooling fans & Central locking -10A

**Bulb/Lamp Index**  
 Main beam warning 10  
 Headlamp main beams 9  
 Headlamp dip beams 8  
 Front fogs warning 293  
 Front fogs 54  
 Rear fogs warning 287  
 Rear fogs 288

**Switch illuminations 82**  
 Fibre optic illumination 255  
 Clock illumination 314  
 Panel illumination 14  
 RH tail 17 & LH tail 22  
 Stops 16  
 RH side 11 & LH side 12  
 LH rear indicator 31  
 Side indicator repeaters 110  
 LH front indicator 29  
 RH rear indicator 30  
 RH front indicator 28  
 L & R Indicator warnings 27

**Interior lamps**  
 Interior lamps 20  
 R/H door lamp 275  
 L/H door lamp 274  
 Map switch & lamp 248, 101, 102  
 249 Bonnet lamps & switch 401  
 Ignition p/u/A2 56  
 Lamp delay unit 57  
 2 way interior lamp switch 242

**Interior lamps**  
 Horn 24 push  
 23 Horns  
 Panel illumination lamps  
 Cruise control 18  
 Stop lamp 18  
 Hazard warning 153  
 Direction indicator switch 25  
 Bulb fail unit 337  
 Cigar lighter lamps  
 Glove box switches & lamps  
 Number plate lamps

**Interior lamps**  
 Horn 24 push  
 23 Horns  
 Panel illumination lamps  
 Cruise control 18  
 Stop lamp 18  
 Hazard warning 153  
 Direction indicator switch 25  
 Bulb fail unit 337  
 Cigar lighter lamps  
 Glove box switches & lamps  
 Number plate lamps